


天创恒达

轻型便携式三脚架
PORTABLE CAMERA TRIPOD

快速使用说明书
QUICK INSTRUCTIONS


01

安装相机方法
THE CAMERA INSTALLATION

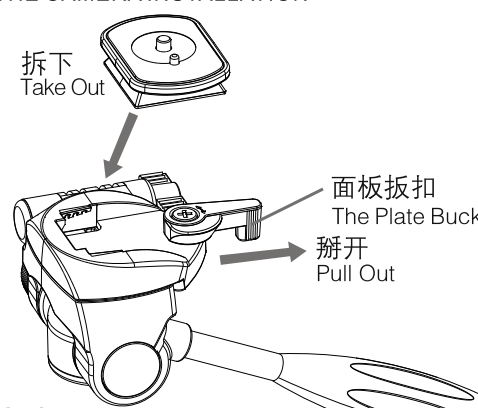


02

用硬币拧紧
TO FASTEN BY A COIN

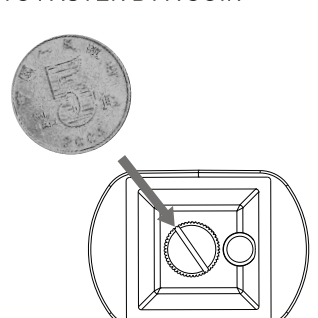


03

云台的使用方法
USAGE OF PAN/TILT

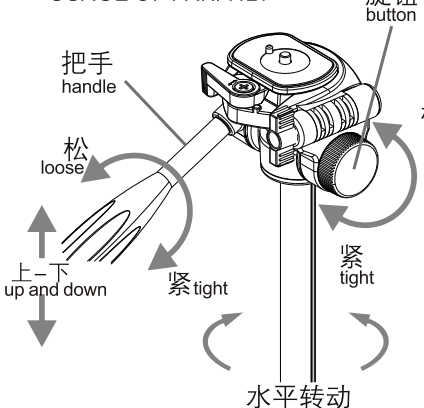


竖拍方法
HOW TO TAKE VERTICAL PHOTO

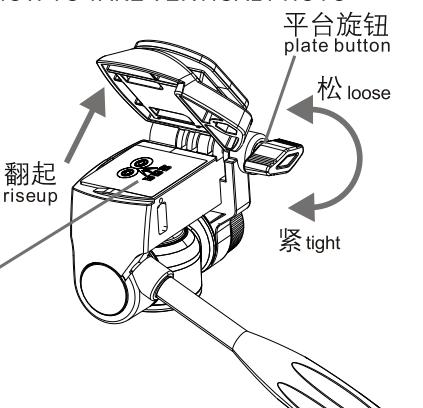


01

中轴的使用方法
THE ELEVATOR PIPE USAGE

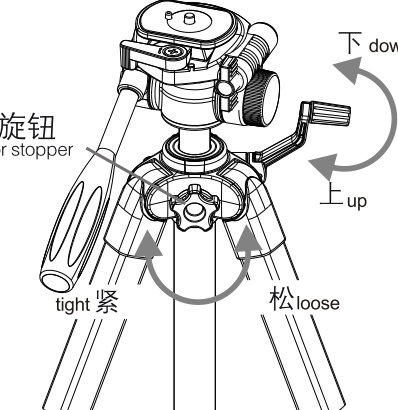

02

支架使用方法
THE LEG USAGE

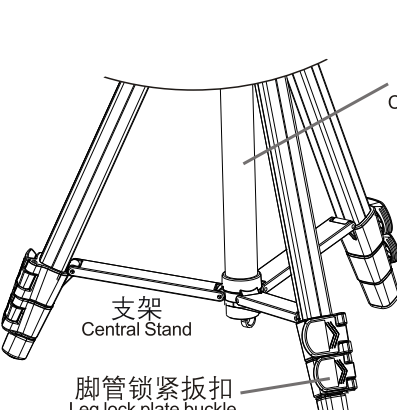

03

中轴的旋鈕
Elevator stopper

先松动中轴旋鈕，再摇动摇柄，在需要的高度处锁紧中轴旋鈕后固定。在摇动摇柄时，请用手扶住相机进行操作。

Please loose the pipe button firstly,then you rotate the axis handle to a properly height and fasten the elevator pipe button.During you rotate the axis handle,you'd better to hold your camera by hand.

04

支架
Central Stand

展开脚的同时，将支架停止在导管的最下端。如果在导管的中途呈不彻底开脚的状态时，脚架将欠缺稳定性。尽可能完全展开脚管使用，以确保三脚架的稳定性。

When the leg is extended out, please keep the braces at bottom position.If the braces is not totally open,it will lead to the camera tripod unstable.

05

脚管锁紧扳扣
Leg lock plate buckle

松开横向把手后，云台可以上下活动；松动横向旋鈕后，云台可水平左右活动，在需要的位置固定后，进行拍摄。

Release the handle,it can move up and down;loose the horizontal button,it can move right and left.Please fasten it at an ideal position to take photo.

06

保修细则
WARRANTY RULES

1.产品保修期为12个月(自开具购物凭证之日起计算)。

2.保修范围仅限三脚架本身，不含脚架袋子及其他配件。

3.以下情况不给予免费保修但支持合理付费维修。

- 保修卡丢失或超过保修期限
- 无法提供保修卡或保修卡有涂改
- 自行拆解产品造成损坏或配件缺失
- 人为损坏(摔坏、挤压变形等)
- 由于操作不当造成的损坏或故障
- 由于火灾、火灾、地震等意外事件造成损坏

4.请妥善保存保修卡，保修卡遗失不予补发。

5.对于因不当使用本公司产品所造成的其他器材损坏、意外损失等，本公司不负连带责任，亦不提供赔偿。

1.The product is under 12 months--warranty(calculatate from the bill date).

2.The warranty covers only tripods, excluding scaffold bags and other accessories.

3.These conditions do not give free warranty, but support reasonable pay to maintenance.

- The warranty card is missing or exceeds the warranty period.
- No warranty card or warranty card is available.
- Self dismantling of products causing damage or missing parts.
- Artificial damage (broken, extruded, etc.)
- Due to damage or failure caused by improper operation.
- Damage caused by accidents such as floods, fires, earthquakes, etc.

4.Please keep the warranty card properly, and the warranty card is lost without replacement.

5.The Company shall not be jointly and severally liable for any damage or accidental loss caused by the improper use of its products, nor shall it provide compensation.

07

保修卡
WARRANTY CARD

产品型号
Product model

客户名称
Customer name

购买日期
Purchasing date

联系电话
Tel

联系地址
Address

尺寸：300x100mm (对折)
材质：80g书纸
装订方式：骑马订